

1home

CH-001 PC TOWER HOLDER


Before starting assembly


- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List to assure that all components were received undamaged. Do not use damaged or defective parts.
- Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.
- Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.

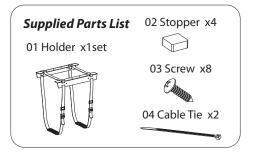

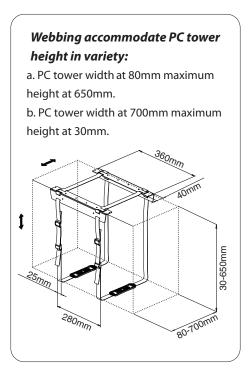



ASSEMBLY GUIDE

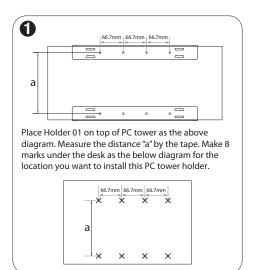

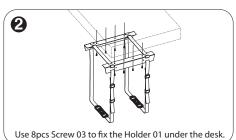

Use opes screw us to fix the Holder of under the desk.

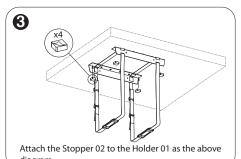

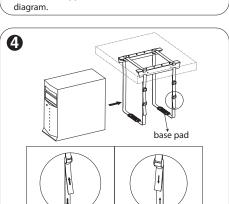

Attach the PC tower to the Holder 01 and make sure the base pads placed in the middle of PC tower bottom. Adjust the webbing to fasten the PC tower stably on the Holder 01.

Tighte

Ŀ

