


BONTEC

Black Clamp-on Keyboard Tray Instruction Manual

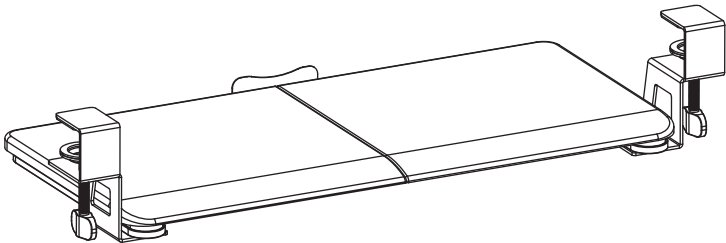

MODEL: KMT01



WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

PACKAGE CONTENTS



A (x2)




B (x8)




C (x6)



D (x2)



E (x1)



F (x1)



G (x1)



H (x1)



I (x1)


TOOLS NEEDED



ASSEMBLY STEPS

STEP 1


Combine the left keyboard board (E) and the right keyboard board (F), and use the connecting board (D) on the reverse side to tighten the countersunk screws (B) with a screwdriver.

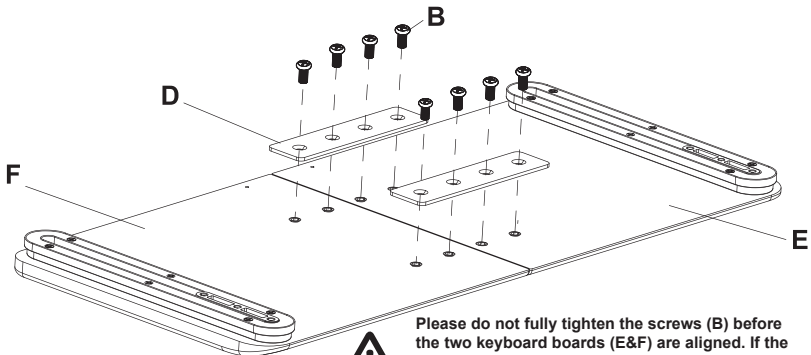

Please do not fully tighten the screws (B) before the two keyboard boards (E&F) are aligned. If the two keyboard boards (E&F) are not yet aligned, please unscrew the screws (B), align the two boards and then tighten the screws (B) again.


STEP 2

Use the ST4.2X9.5 pan-head tapping screw (A) on the back of the keyboard baffle (I) to tighten the keyboard board with a screwdriver.

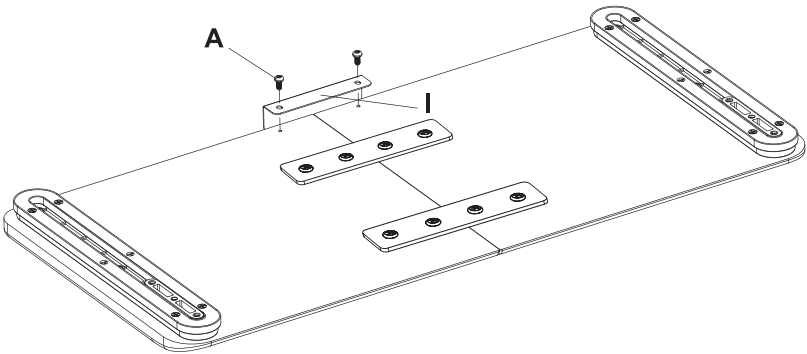

STEP 3

Use M5X12 round head screws (C) to install the clamps (G, H) on the slider, and tighten with a screwdriver.

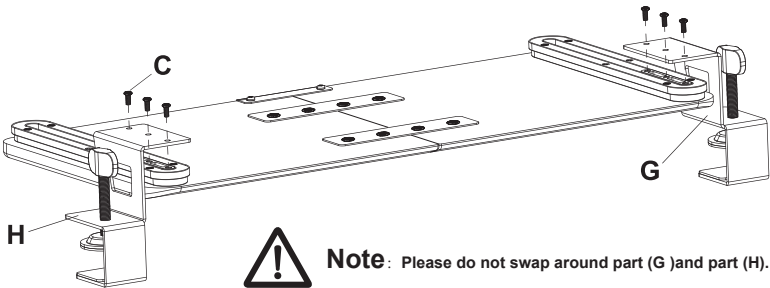

STEP 4

Place the assembled keyboard tray on the edge of the table and tighten the clamp.

